

Warnings

CAUTION—risk of fire and this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Suitable for wet locations.

Mounting orientation must have light source facing down.

Electrical service must be disconnected during installation.

Proper grounding is required to protect against shock and proper operation.

Tools Required

9/64" Allen wrench for 8-32 socket cap screws.

7/16" wrench for jam nuts and coupling nuts.

4' level

Installation

Step 1: Install exterior power supply at remote location up to 40' away.

Step 2: Place clamp assembly in the top of the ring with the carriage bolt in the built-in fixture track. Slide assembly to approximate mounting location.



Step 3: Mount fixture to cables in approximate desired location by placing the cable clamp around the catenary cable. Position power cable from luminaire to nearest point of power supply along steel cable.

Step 4: Move fixture to final desired position. Ensure that clamp arm is perpendicular to cable and fixture. Fully tighten coupling nut and cable clamp screws to torque spec of 8ft-lbs.

Step 5: Adjust turnbuckles to level the fixture horizontally. Turnbuckles have 3" of adjustment length.

Step 6: Tighten jam nuts to secure turnbuckles using 7/16" wrench and metal pin through turnbuckle. Tighten jam nuts to 8ft-lbs.

Step 7: Connect exterior connector from fixture to wire whip. Connect whip to 24V side of power supply. Secure wire to cable with standard cable ties.

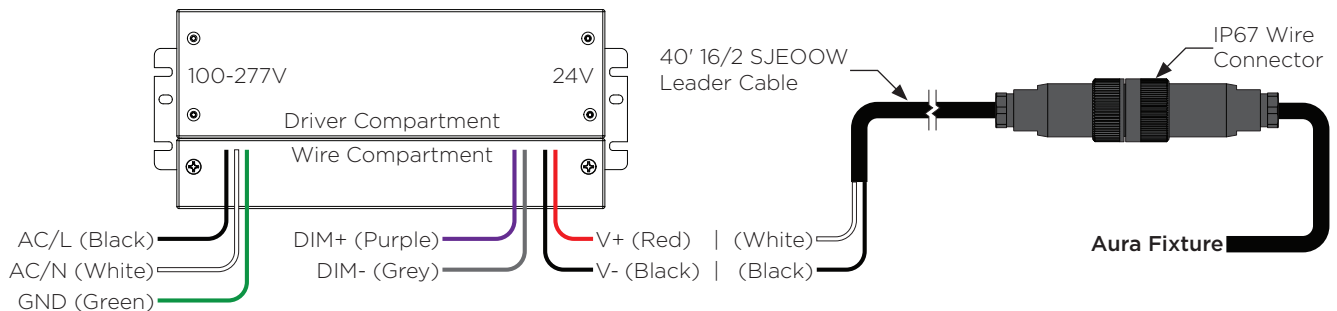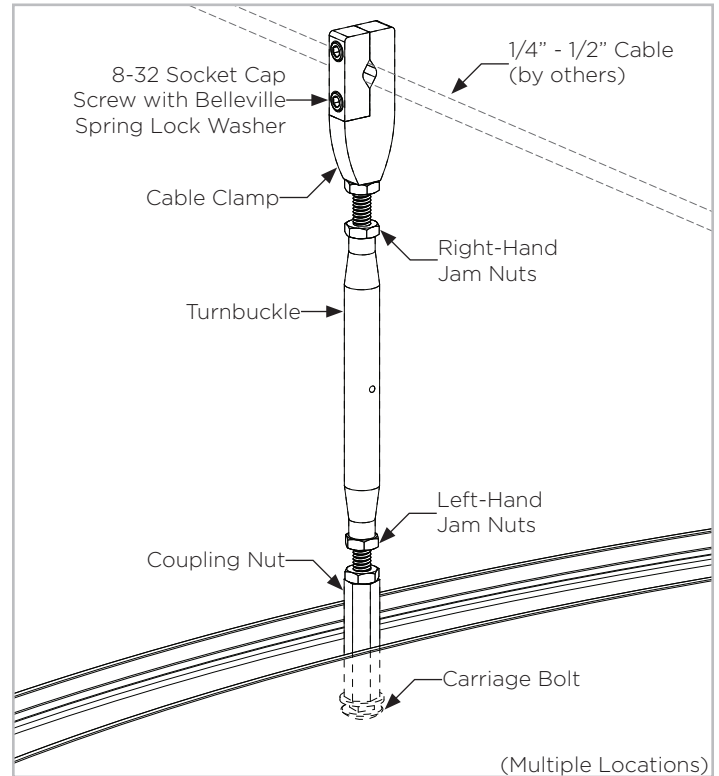

Suitable for indoor or outdoor use. Horizontal or vertical mounting. End and side knockout locations of 7/8" (1/2" trade size"). When installing multiple power supplies, separate the enclosures by at least 3" of space from edge to edge to prevent a rise of ambient temperature between the power supplies.