

Warnings

CAUTION—risk of fire and this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Suitable for wet locations.

Mounting orientation must have light source facing down.

Electrical service must be disconnected during installation.

Proper grounding is required to protect against shock and proper operation.

Tools Required

T30 security bit

2.5mm Allen wrench

P1 Phillips screwdriver

Wiring tools and connectors

Installation

Step 1: Turn off power to location.

Step 2: Remove (4) 1/4"-20 screws from bollard body to release the baseplate.

Step 3: Attach baseplate to pre-installed anchor bolts.

Step 4: Connect bollard wiring to incoming power as shown in Figure C.

Step 5: Turn power on to location.

Figure A

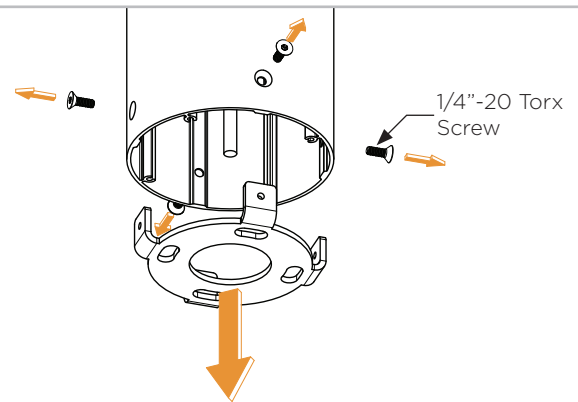


Figure B

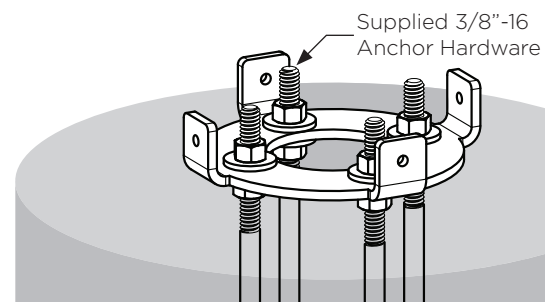


Figure C

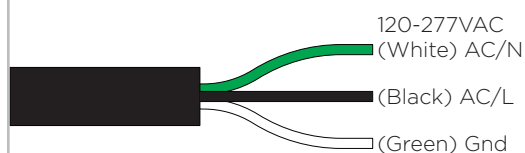


Figure D


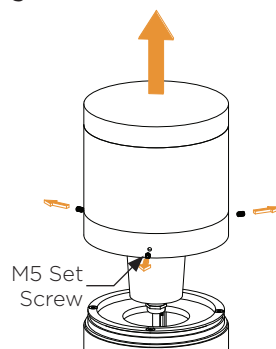


Figure E

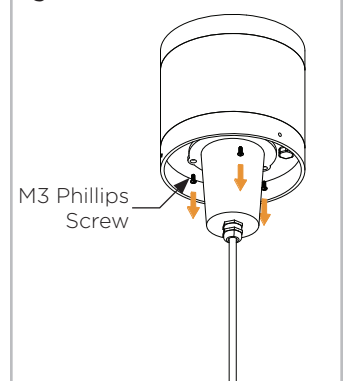

Driver Access

Step 1: Turn off power to location.

Step 2: Remove (3) M5 set screws from bollard to release bollard head assembly as shown in Figure D.

Step 3: Remove (3) M3 Phillips screws to release driver compartment as shown in Figure E.

Step 4: Disconnect wire connectors between head assembly and driver compartment.

Figure F

