
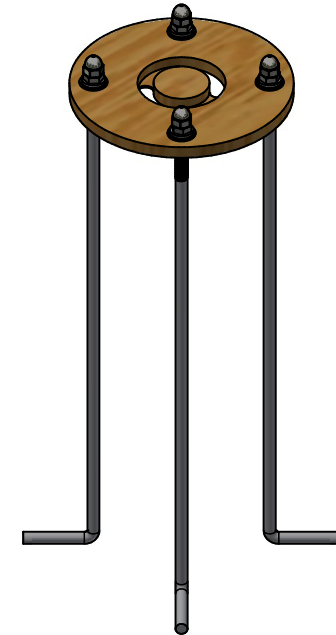


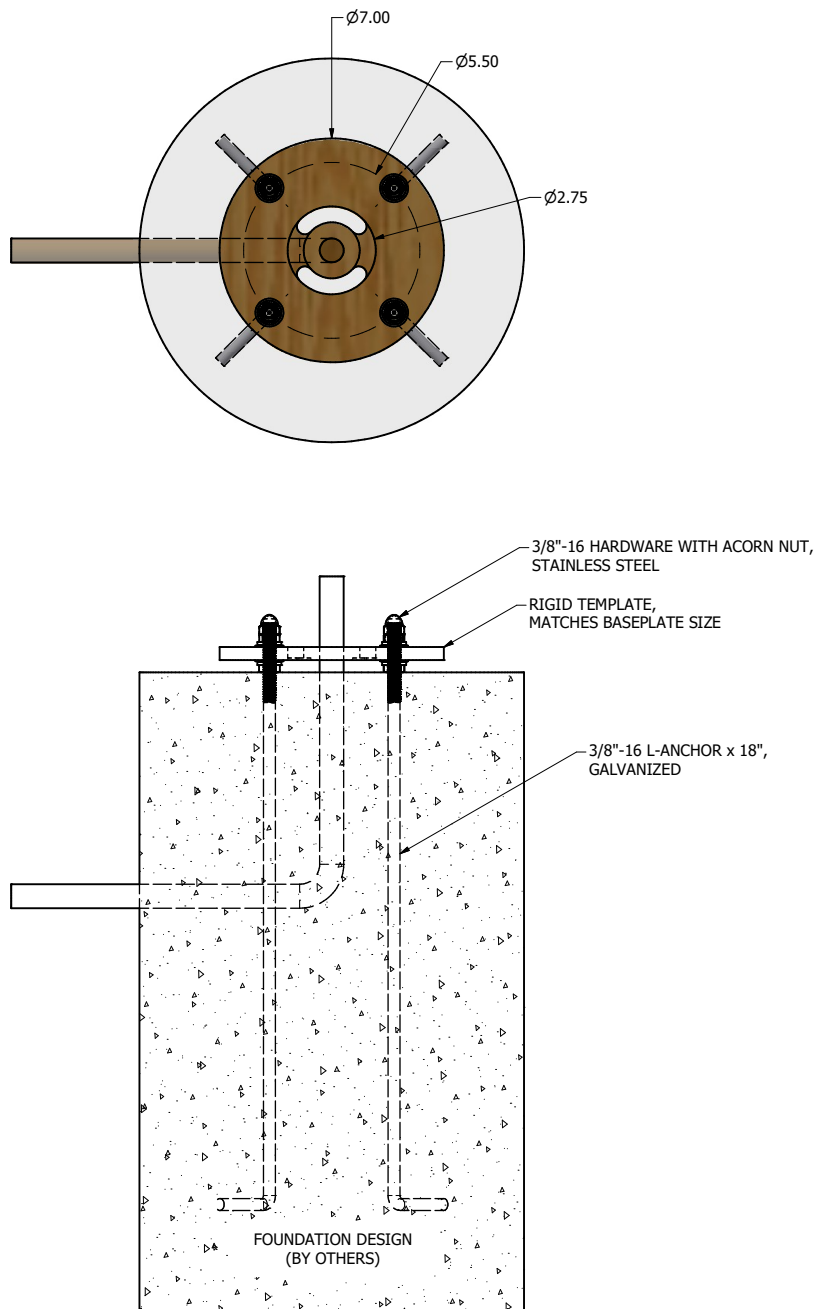

Use baseplate template to install anchor bolts as shown. Use supplied leveling nuts to ensure that the template is level in both directions. Slope concrete away from baseplate. After concrete has set, remove template from anchor installation and set bollard on top or anchor bolts. Tighten 3/8"-16 hex nuts until bollard is secure.

Typical Bloom Bollard Anchor Bolt Installation				
TYPE:				
STAMP	STRUCTURA 9635 Widmer Rd. phone 913.390.8787 Lenexa, KS 66215 service@structura.com			
	PROJECT NAME PROJECT LOCATION			
	SHEET NUMBER 1 of 1	REVISION Issue	DATE 9/11/2026	DRAWING Bloom - Anchor Bolt.idw