



FIGID BASE TEMPLATE
MATCHES BOLLARD SIZE

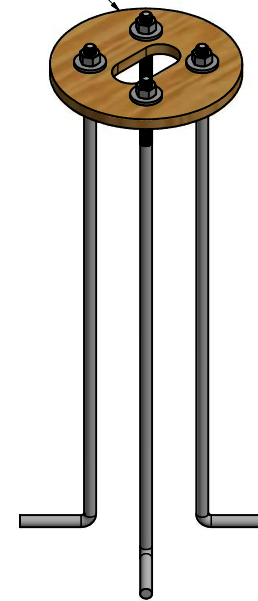

BASEPLATE

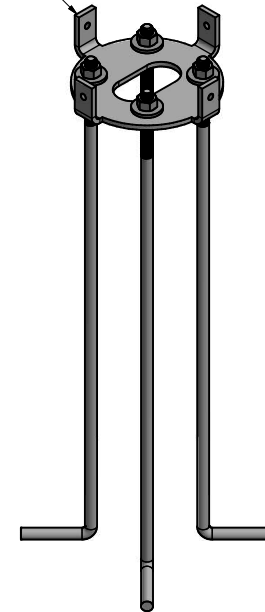

Use baseplate template to install anchor bolts as shown. Slope concrete away from baseplate. After concrete has set, remove baseplate from bollard by removing (4) 1/4\"/>

Typical Ata Anchor Bolt Installation

STAMP

STRUCTURA

19922 W. 162nd Street phone 913.390.8787
Olathe, KS 66062 projects@structura.com

Ata Bollard

SHEET NUMBER

1 of 1

REVISION

DATE

10/23/2019

DRAWING

Ata - Anchor Bolt.idw