

### Warnings

CAUTION—risk of fire and this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Suitable for wet locations.

Mounting orientation must have light source facing down.

Electrical service must be disconnected during installation.

Proper grounding is required to protect against shock and proper operation.

### Tools Required

9/6" Wrench

P2 Phillips screwdriver

Wiring tools and connectors

### Installation

Step 1: Turn off power to location.

Step 2: Connect input power to driver located in base of bollard. Driver bracket can be removed as shown in Figure A if needed for ease of connection.

Step 3: Place bollard over pre-installed anchor bolts.

Step 4: Level bollard in both directions using leveling nuts and secure with supplied 3/8"-16 hardware.

Step 5: Turn power on to location.

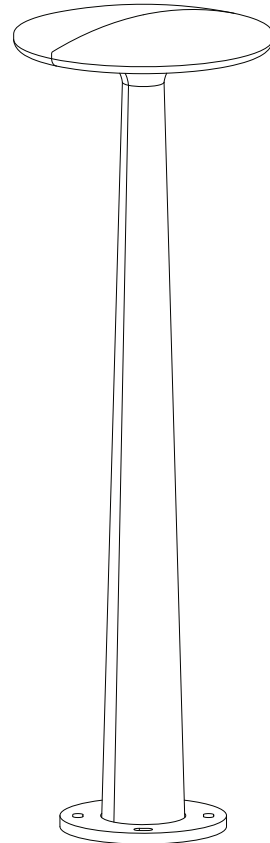


Figure A

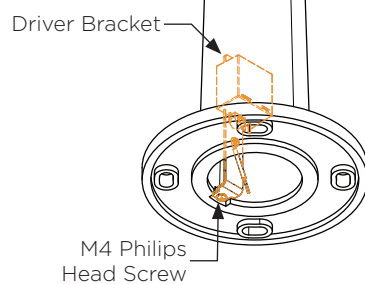


Figure B

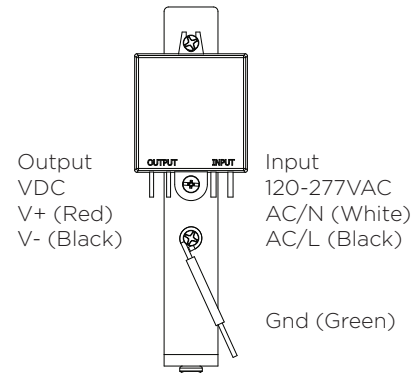


Figure C

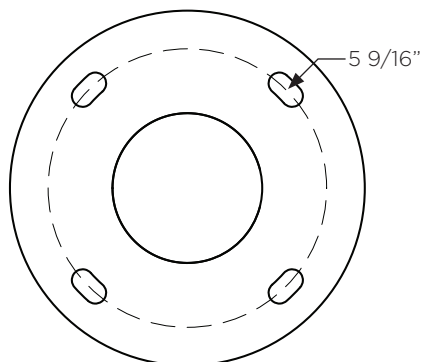


Figure D

