


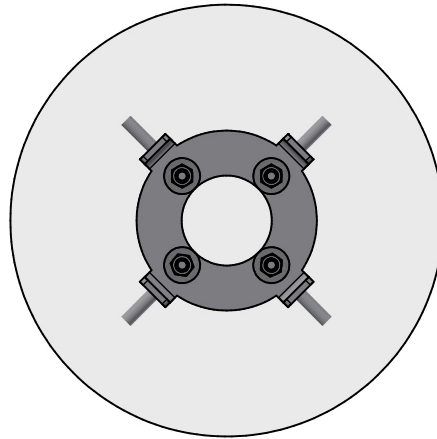
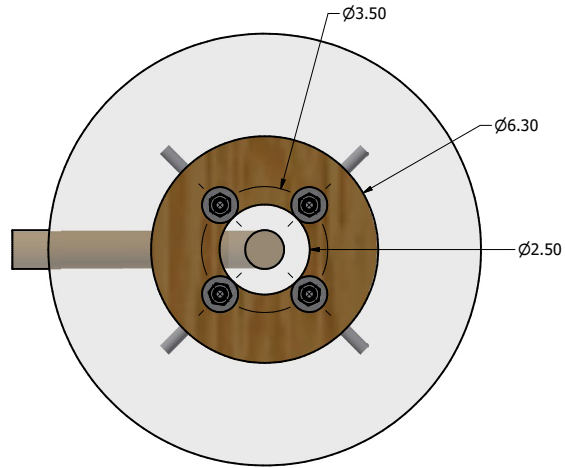


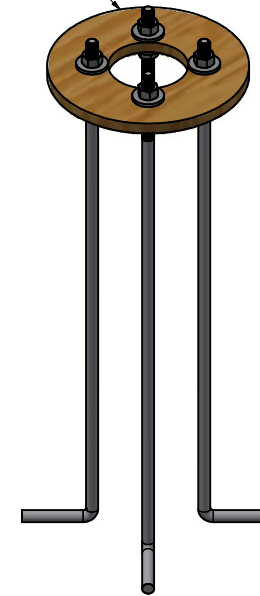

RIGID BASE TEMPLATE
MATCHES BOLLARD SIZE

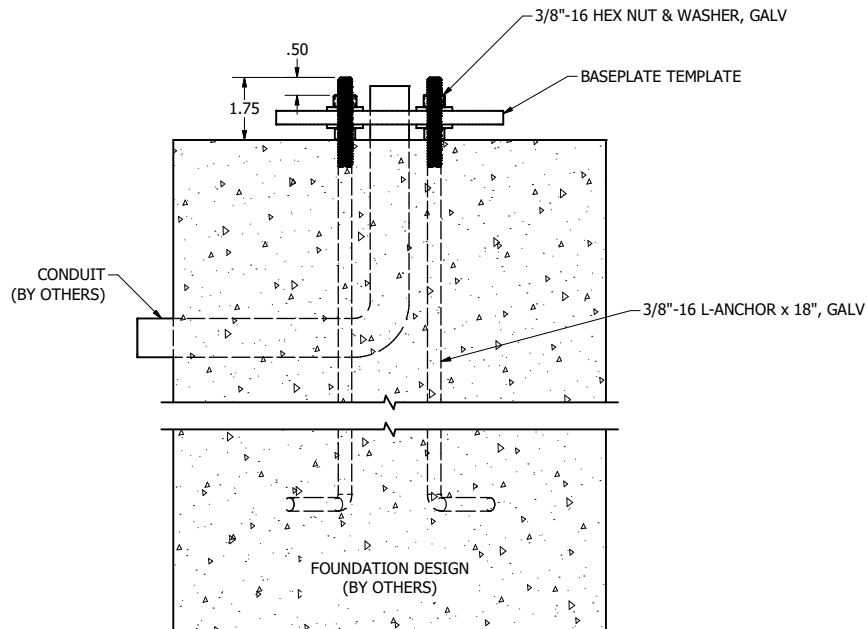

BASEPLATE

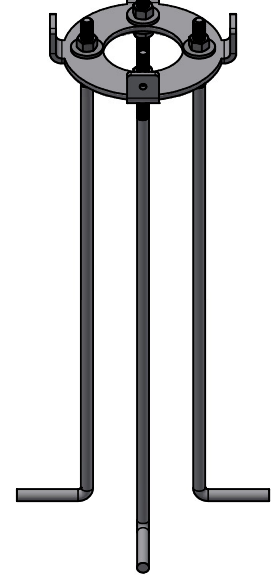

Use baseplate template to install anchor bolts as shown. Slope concrete away from baseplate. After concrete has set, remove baseplate from bollard by removing (4) 1/4"-20 flat head screws. Replace template with bollard baseplate. Tighten 3/8"-16 hex nuts until baseplate is secure. Set bollard onto baseplate and secure screws.

Typical Navi Anchor Bolt Installation				
TEMPLATE: 98006				
STAMP	STRUCTURA 9635 Widmer Rd. phone 913.390.8787 Lenexa, KS 66215 service@structura.com			
	PROJECT NAME PROJECT LOCATION			
	SHEET NUMBER	1 of 1	REVISION Issue	DATE 10/28/2024