


SECTION A-A

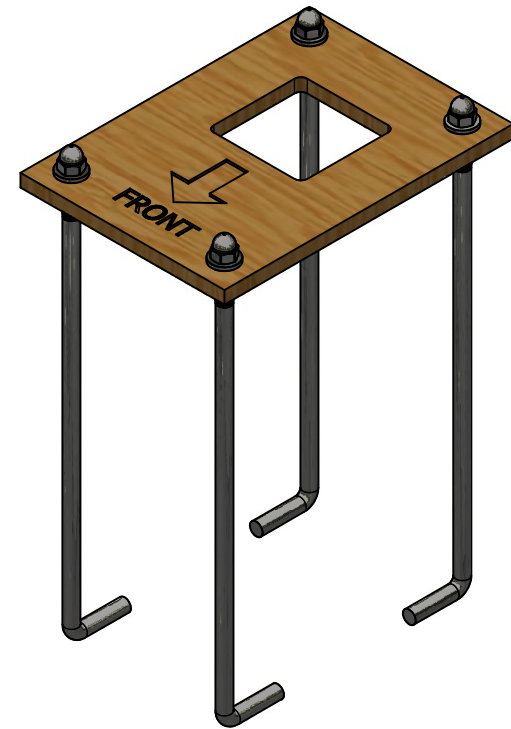

Assemble anchor bolts to template as shown above.  
Install bottom of template flush with top of finished grade.  
Note: Template must be installed level in both directions!

Traditional Tandem Anchor Bolt Installation				
Template: 91195				
STAMP	<b>STRUCTURA</b> 9635 Widmer Rd. phone 913.390.8787 Lenexa, KS 66215 service@structura.com			
	PROJECT NAME PROJECT LOCATION			
SHEET NUMBER	1 of 1	REVISION	Issue	DATE 10/28/2024
		DRAWING		Tandem - Traditional.idw